## COMFORT RECTANGULAR DOUBLE ENDED 180x80 cm



Size (cm) : 190x90

Height (cm) : 56

Weight (kg) : 25

Front Panel Weight (kg) : 5.5


Side Panel Weight (kg) : 3

Volume (lt) : 196


Available massage systems : Duo Soft


Aqua Maxi Aqua Soft Aqua Soft Easy



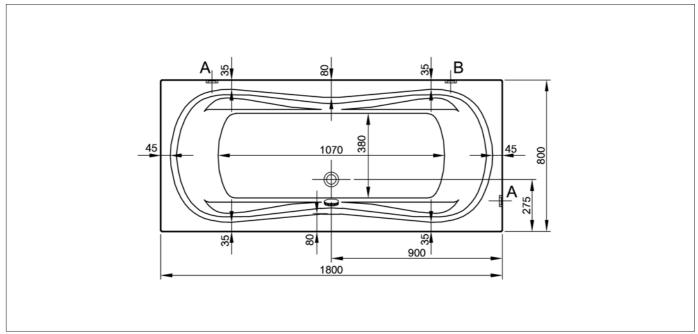

Plan

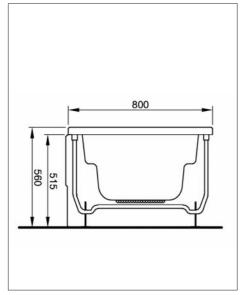

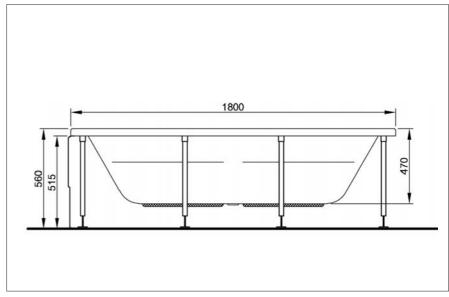

Side View Front View





Detail A Detail B


• As shown in Figure Plan, the wall hangers (details A-B) are used to fix the product to the wall. It is suggested to use the wall hangers to rigid the bathtub.

## **Points to Notice:**

- Comfort Rectangular Doubleended 190x90 is a symmetrical model. The siphone hole and siphone controlling handle are in the middle. Therefore, it is convenient for double-ended usage.
- An elbow and a waste connection hose of 50 mm. will be delivered with the product but an edge lath and other accessories are not included.
- The place where the product will be installed should be straight.
- An airing and access window should be left if the hydromassage bathtub is installed without panels.
- During the installation of the panels, the adjustment of the leg set should be carried out according to the height of the panel.
- The electronical system is running with 220 volt (with earth connection). For its connection a 3x2,5 mm. cable should be used.
- The product should be protected with an appropriate ampere fuse (for Duo Maxi System 20 ampere, for Duo Soft System 16 ampere, for Aqua Maxi and Aqua Soft Systems 10 ampere) and the amper fuse should be closed when it is not used.
- The faucet should not be applied on the pump of the hydromassage bathtub.
- The spout should be min 17 cm. if the faucets are installed to the wall.
- Handgrip application for this product is not available.
- Because of the technical features of the product, it should definitely be used with the 5601084 coded waste & siphone. No other waste & siphone alternative is available.
- For the cleaning of the acrylic bathtub look at the User Manual.
- Waste connection fuse, wall hangers and user manual are delivered with the product.

## **Faucet Applications**

ANY APPLICATION OF TABS ON THIS BATHTUB IS NOT POSSIBLE.

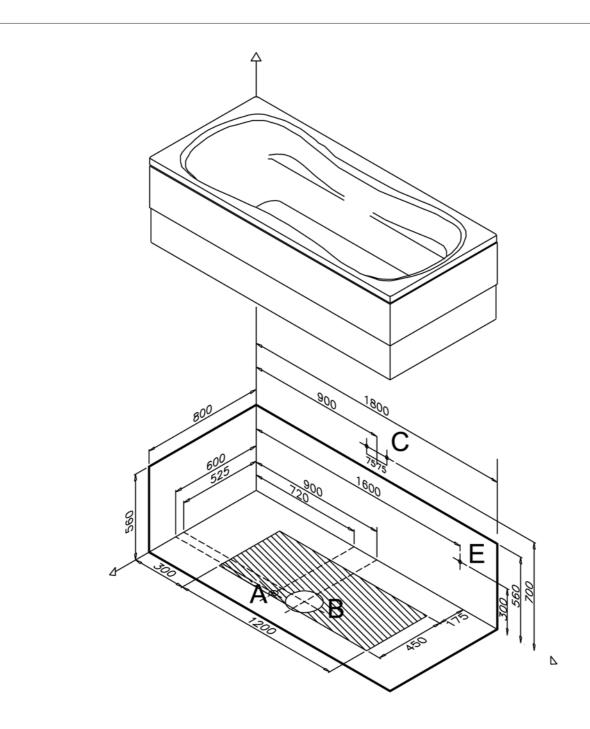

The area where the waste outlet (ø 50 mm) can be placed in.


: Ideal position of the waste outlet (ø 50 mm). The end point of the waste outlet should not be cut out, and should be left at least 50 mm. above the surface.

: The area (ø 200 mm.) where the waste outlet should not be left. : Hot & cold water inlet for the wall taps.

: Measures for electrical connection of whirlpool tubs.


There is no need to leave additional space for the silicone during the installation process. It is enough to prepare the required area according to the size of the product.


## **Massage Systems**

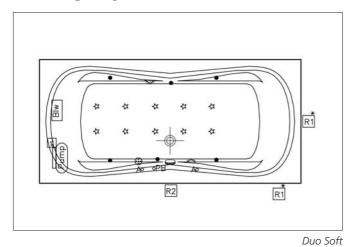

R1

Aqua Maxi

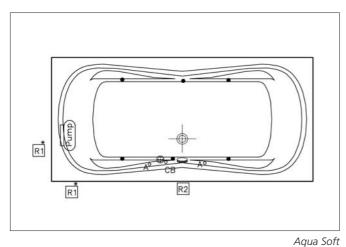

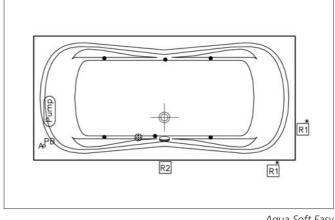

Aqua Soft Easy

Pump	Pump
	Electronic Control Panel
7	Transformer
Blw	Blower
°СВ	Control Button
A°	Air Controller
PB	Push Button

☆	Air Jets
<del>-</del>	Waste
•	Water Jets
•	Micro Water Jets
<i>y</i> <sup>4</sup> ′ <sub>4</sub>	Underwater Light
•	Water Suction Filter

IMPORTANT!			
For the electrical connection of the hyris necessary.     The cable connection of the hyrdomassage bathtubs should be applied as shown in the Figure.     Check whether the yellow-green earth cables bound with the metal parts placed under the hydromassage bathtubs are connected to all legs.	GROWN PHASE   SELOW-GREEN GROUND   COUNTY   COUN		

If the bathtub is used without panels, the following airing and access windows should be applied:

- R1 Access window (min. 400x400 mm.)
- R1 Airing and access window (min. 400x400 mm.)
- R2 Access window (min. 400x400 mm.)
- R2 Airing and access window (min. 250x250 mm.)